

Table 1: mounting of sensors on cylinders

Ø	CST - CSH	CSV	CSN
	1		
			S21
			S21
			Direct mounting
			Direct mounting
			\$53
			\$53
	S-CST-18		355
	3 (3) 21	Direct mounting	
	S-CST-01	5	
32	S-CST-45N1		
	J-(J -45 NI		
	C_CCT AEM1		
40	S-CST-45N1		
40 50	S-CST-45N1		
40			
	Ø	16	16

C CAMOZZI

Table 2: mounting of sensors on cylinders

Series	Ø	CST - CSH	
61	32	Direct mounting	
	40	Direct mounting	
	50	Direct mounting	
	63	Direct mounting	
	80	Direct mounting	
	100	Direct mounting	
63P	32	Direct mounting (CSH only)	
	40	Direct mounting (CSH only)	
	50	Direct mounting (CSH only)	
	63	Direct mounting (CSH only)	
	80	Direct mounting (CSH only)	
	100	Direct mounting (CSH only)	
	125	Direct mounting (CSH only)	
63T	32	S-CST-25	
	40	S-CST-25	
	50	S-CST-25	
	63	S-CST-25	
	80	S-CST-26	
	100	S-CST-26	
	125	S-CST-27	
69	32	Direct mounting	
	40	Direct mounting	
	50	Direct mounting	
	63	Direct mounting	
	80	Direct mounting	
	100	Direct mounting	
	125	Direct mounting	
6PF	50	Direct mounting	
	63	Direct mounting	
	80	Direct mounting	
	100	Direct mounting	
	125	Direct mounting	
90	32	S-CST-06	
	40	S-CST-07	
	50	S-CST-08	
	63	S-CST-09	
	80	S-CST-10	
	100	S-CST-11	
	125	S-CST-12	
94	16	S-CST-05	
	20	S-CST-05	
	25	S-CST-05	
95	16	S-CST-05	
	20	S-CST-05	
	25	S-CST-06	
97	32	S-CST-06	
	40	S-CST-07	
	50	S-CST-08	
	63	S-CST-09	



Table 3: mounting of sensors on cylinders

Series	Ø	CST - CSH	CSV	CSC-D / CSC-H
QC	20	Direct mounting	C3V	(30-07 (30-1
Ųζ	25	Direct mounting		
	32	Direct mounting		
	40	Direct mounting		
	50	Direct mounting		
	63	Direct mounting		
QCBF	20	Direct mounting		
фері	25	Direct mounting		
	32	Direct mounting		
	40	Direct mounting		
QCTF	20	Direct mounting		
4	25	Direct mounting		
	32	Direct mounting		
	40	Direct mounting		
QP - QPR	12		Direct mounting	
	16		Direct mounting	
	20	S-CST-01		
	25	S-CST-01		
	32	S-CST-01		
	40	S-CST-01		
	50	S-CST-01		
	63	S-CST-01		
	80	S-CST-01		
	100	S-CST-01		
QХ	10			Direct mounti
	16			Direct mounti
	20			Direct mounti
	25			Direct mounti
	32			Direct mounti
ST	20	Direct mounting		
	32	Direct mounting		
	40	Direct mounting		
	50	Direct mounting		



Table 4: mounting of sensors on grippers, electromechanical axis/cylinders

* Further details about Series 5E electromechanical axis and Series 6E electromechanical cylinders can be found in the Electric actuation catalogue.

Corios	a	CCT CCU	CCD D / CCD !!	CCC D / CCC !!	CCD D / CCD ::
Series	Ø	CST - CSH	CSB-D / CSB-H	CSC-D / CSC-H	CSD-D / CSD-H
Grippers					
CGA	10		Direct mounting		
	16		Direct mounting		
	20		Direct mounting		
	25		Direct mounting		
	32		Direct mounting		
CGC	50		Direct mounting (CSB-D-220 only)		
	64		Direct mounting (CSB-D-220 only)		
	80		Direct mounting (CSB-D-220 only)		
	100		Direct mounting (CSB-D-220 only)		
	125		Direct mounting (CSB-D-220 only)		
CGLN	10			Direct mounting	
	16			Direct mounting	
	20			Direct mounting	
	25			Direct mounting	
	32			Direct mounting	
GP .	10		Direct mounting		
	16		Direct mounting		
	20		Direct mounting		
	25		Direct mounting		
	32		Direct mounting		
GPS	10				Direct mounting
	16				Direct mounting
	20				Direct mounting
	25				Direct mounting
	32				
COT					Direct mounting
GPT	16				Direct mounting
	20				Direct mounting
	25				Direct mounting
	32				Direct mounting
	40				Direct mounting
GSN	16			Direct mounting	Direct mounting
	20			Direct mounting	Direct mounting
	25			Direct mounting	Direct mounting
	32			Direct mounting	Direct mounting
nnen	8				Direct mounti-
RPGB					Direct mounting
	12				Direct mounting
1-4					
lectromechanical axis *	FC	Bitti (gg)			
iE	50	Direct mounting (CSH only)			
	65	Direct mounting (CSH only)			
	80	Direct mounting (CSH only)			
Electromechanical cylinders *					
6E	32	Direct mounting			
	40	Direct mounting			
	50	Direct mounting			
	63	Direct mounting			